



Setting

1. In Conjunction with a pressure gauge apply correct operating pressure switch.
2. Turn adjusting nut until switch operates.
3. Release pressure (Switch is now set approximately)
4. A more precise setting can be achieved by repeating the above and will provide a rising pressure operating point.
5. To set on falling pressure turn adjusting nut until switch operates then back-off until switch resets.

NOTE: A $\frac{1}{4}$ turn of the adjusting nut will give a change in setting of approximately 10% of the range of the switch.

At ambient pressure the switches will be in the operated condition consequently the wiring should be reversed i.e. NO becomes NC.