





## Electrical Wiring Guide (Air Signal)

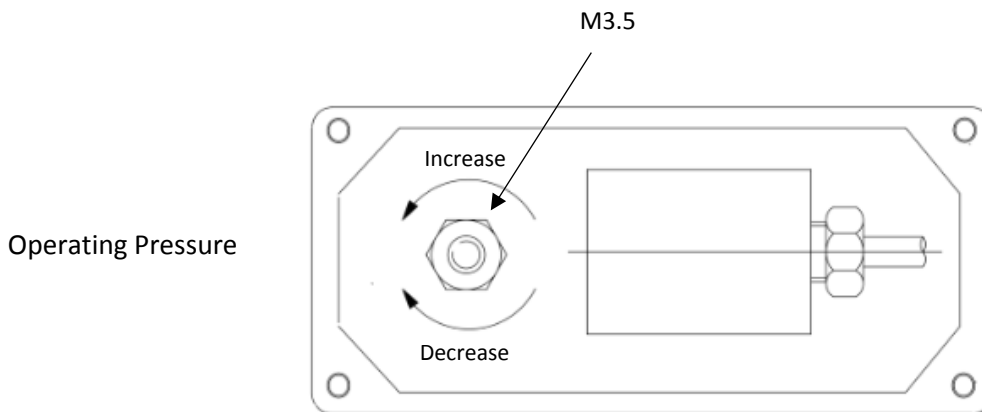

The Pressure Switch is set at \_\_\_\_ Signal on rising/Falling pressure.

A ¼ turn of the adjusting nut will give a change in setting of approximately 10% of the switch range

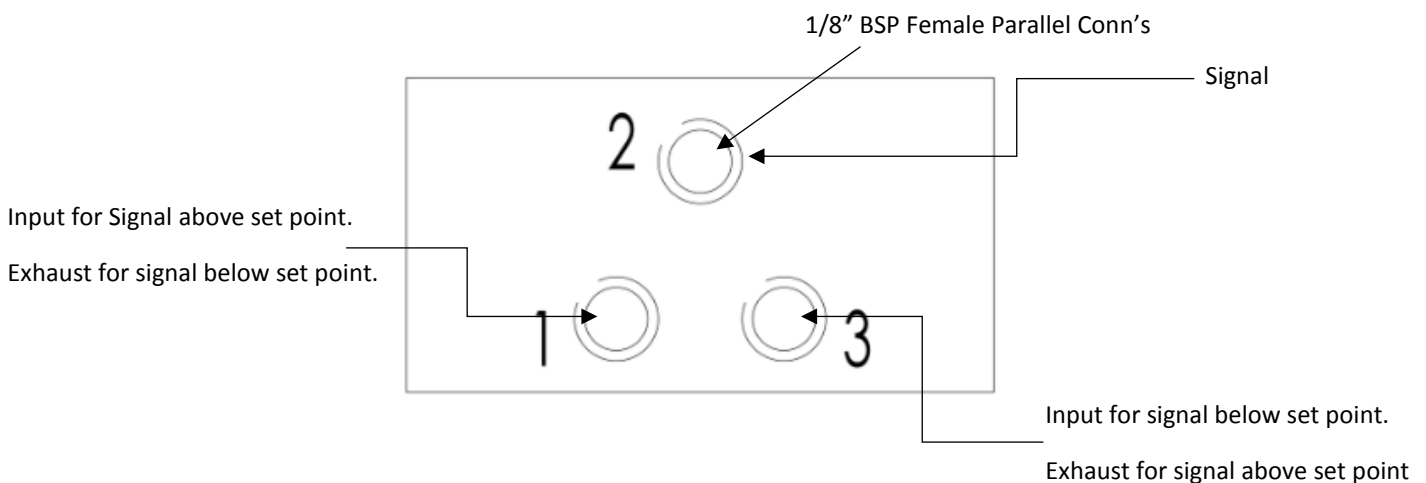

Air Supply required between 2-8 bar at 25µm filter should be fitted in the supply time.

This pneumatic pressure switch has a constant bleed, vented through the switch box